



# DESIGN Post with Slim Base

(Knockdown with Rubber Insert)

**1.** Make sure the center screw is lightly hand tight.

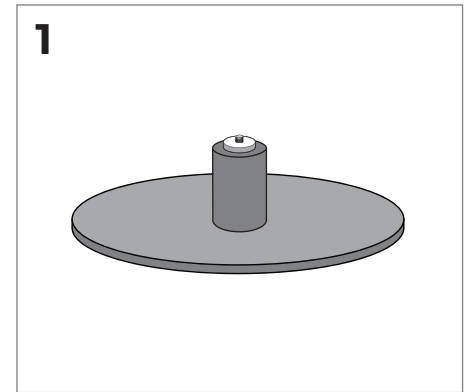

**2.** Bring the tube closer and insert the central rubber into it. If the rubber does not enter the tube, loosen the central screw a little.

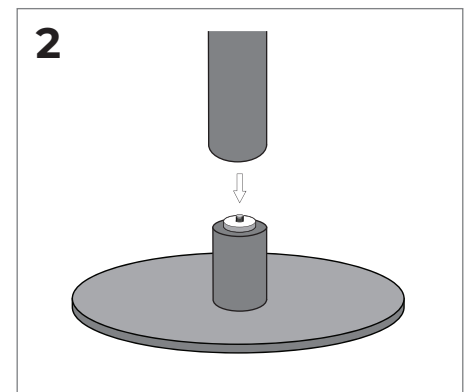

**3.** Tighten the center screw firmly until it stops turning.

Notice: If the screw does not stop turning, remove the tube, hold the rubber with your hand and tighten the screw a little. This way you will be able to expand the central rubber and when inserting the tube again the friction will make the rubber unable to rotate and you will be able to achieve the desired fixation.

